

SMITH-Style

Smith-Style PLL FM/BT/CD/MP3 Boom Box Instruction Manual



RFW025FCBT

Important Safety Instructions

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS SPEAKER TO RAIN OR MOISTURE.

To reduce the risk of electrical shock, fire, etc.:

1. Do not place unit near any heat source such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
2. Do not block any ventilation openings of unit.
3. The unit shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the unit.
4. Do not place any heavy loads onto the unit, and do not step on it, the load may fall and cause serious injury to the unit.
5. Please read Rating Labels at the back of unit for power input and other safety information.
6. This unit is intended to be used only with the power supply provided.
7. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at any point where they exit from the unit.
8. Never unplug your unit by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet.
9. Repair or replace all electric service cords that have become frayed or otherwise damaged immediately. Do not use a cord that shows cracks or abrasion damage along its length, the plug or the connector end.
10. To prevent fire or shock hazard, do not use this plug with an extension cord or other outlet unless the blades can be fully inserted to prevent blade exposure.
11. During lightning or raining days, unplug the unit for additional protection during thunderstorms or when the unit is not used for prolonged periods. This will prevent damage to the unit from lightning and power surges.
12. Do not attempt to carry out any service work yourself. By opening or removing the cabinet, you may be exposed to dangerous voltage or other hazards. Any service work should be carried out by qualified technicians.
13. The normal function of the product may be disturbed by strong Electro-Magnetic Interference. If so, simply reset the product to resume normal operation by following the instruction manual. In case the function could not resume, please use the product in other location.
14. The means of disconnecting this apparatus from the mains supply is plug of adapter. The disconnect device shall remain readily operable.
15. The battery of remote control shall not be exposed to excessive heat such as sunshine, fire or the like.
16. Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
17. In the interests of safety and to avoid unnecessary energy consumption, never leave the unit switched on while unattended for long periods of time, e.g. overnight, while on holiday or while out of the house. Switch it off and disconnect the mains plug from the mains socket.

Contents

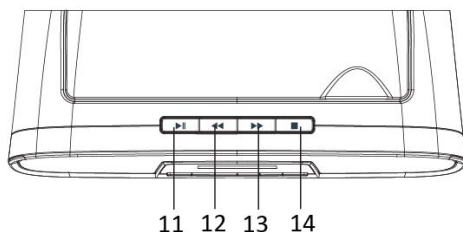
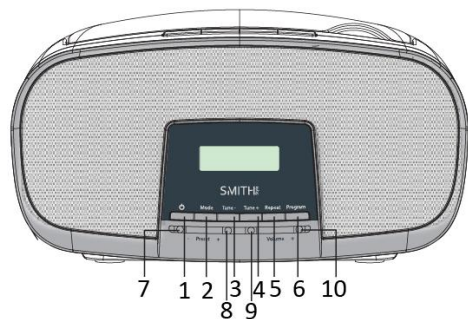
Safety information	2
Getting Started	4
Unit views	4
Switching your CD Boombox on for the first time	5
AC Operation	5
DC (Battery) Operation	5
Backlight	5
Listening to your radio	5
Automatic Memory Scan (AMS)	5
Manual Tuning	6
Automatic Tuning	6
Programming Preset Stations	6
Recalling the Stored Preset Stations	6
Listening to your compact discs	6
Playing the CD	7
Repeat and Random Play	7
Program Play	7
Repeat Program Play	8
Listening to your USB	8
Bluetooth mode	9
Stereo music connection to your mobile phones	9
AUX Input	10
Using headphones	10
General Information	11
Care and Maintenance	11
Guarantee.....	12


Getting Started





What can you find inside of your package?

- Main unit
- Instruction manual
- AC Power cord
- Remote

Unit Views




1.  Power button
2. Mode button
3. Tune – button
4. Tune + button
5. Repeat button
6. Program button
7. Preset – button


8. Preset + button
9. Volume - button
10. Volume + button
11.  button
12.  button
13.  button
14.  button

Switching your CD Boombox on for the first time

AC Operation

1. Insert one end of the AC power cord to the AC input socket located at the back of the unit.
2. Plug the AC power cord to the AC mains outlet.
3. Press the  button once to turn the unit on.

DC (Battery) Operation

1. Ensure the power cord is disconnected from the AC mains and the unit.
2. Installed the batteries (6 X 1.5V C Size) into the battery compartment.
3. Press the  button once to turn the unit on.

Note: *To obtain the best performance in DC operation, the use of alkaline batteries is highly recommended.*

Display Backlight

When the unit is switched to on (in both AC & DC battery operation), the display backlight will be turned on to full brightness for around 10 seconds and then go to dim, press on any key will turn it to full brightness again for around 10 seconds.

Listening to your radio

When the unit is powered up and switched to on for the first time, it will automatically enter into the FM Radio mode. The display will show FM and the frequency.

The FM telescopic antenna is located at the left side of the unit, you should fully extend and adjust its position and direction until you find the best reception.

To select the FM mode during other operation modes, repeatedly press the **Mode** button until the display shows FM and the frequency.

Automatic Memory Scan (AMS)

During FM operation, press and hold the **Program** button until it starts to scan the entire frequency band, the found stations will be automatically stored into the preset memories.

Note: *Once the AMS is conducted, all previous preset stations in the memory will be overridden.*

Manual Tuning

You can use the manual tuning to tune to weak stations or your desired frequency.

1. During FM operation, repeatedly press the **Tune +** or **Tune -** button until you read your desired frequency or the reception is at its best.
2. The stereo icon will be displayed if a FM stereo station is received. To toggle select between stereo and mono, press the **■** button.

Automatic Tuning

1. Press and hold the **Tune +** or **Tune -** button for longer than 2 seconds to scan up or down the frequency band for stations, and it will automatically stop on the first found station of sufficient signal strength.
2. Repeat the above procedure if you want to search for another station.

Programming Preset Stations

You can program stations of your choice and store up to 20 stations into its memories.

1. First tune to your desired station, then press the **Program** button once and the display will show “P-01” and flash, press the **Preset +** or **Preset -** button to select the preset number.
2. When your desired preset number appears on the display, press the **Program** button again to confirm, the current station will be stored into your desired preset number.
3. Repeat the above steps to program more preset stations, storing a new station into a preset location will erase the previous stored station in that location.

Recalling the Stored Preset Stations

To recall the stored preset stations, repeatedly press the **Preset +** or **Preset -** button until you see your desired preset number, the associated frequency will be finally displayed.

Listening to your compact discs

NOTE: Although this CD/MP3 player can read CD-R and CD-RW discs in addition to normal CDs, the playability of CD-R and CD-RW discs may be affected by the type of software that was used to create the discs, as well as the quality and condition of the blank media you are using, 100% playability cannot be

guaranteed. This is not an indication of a problem with the player.

Playing the CD

1. To select CD mode, repeatedly press the **Mode** button until “CD” is displayed.
2. Open the CD door and load the disc with the printed label side facing up, then close the CD door. The display will finally show the total number of tracks. If a CD/MP3 disc is being played, the display will show “MP3”.
3. Press the ►|| button to start playback from the beginning, and you can now press the ►|| button to toggle select between the playback “PAUSE” and “PLAY” function.
4. To skip forward or back to other tracks during playback, press the ►► or ◀◀ button.
5. To select other folders in the CD/MP3 disc, press the **Preset +** or **Preset -** button.
6. To stop playback, press the ■ button.

Repeat and Random Play

During playback, you can press the **Repeat** button to select the repeat and random playback function:

1. To repeat the same track, press **Repeat** button once, the display will show *“Repeat One icon”*.
2. To repeat the entire disc, press the **Repeat** button again, the display will show *“Repeat All icon”*.
3. If you are playing a MP3 disc, an additional *“FOLDER”* option will appear. This will repeat the current folder.
4. To start random playback, repeatedly press the **Repeat** button until “RAND” appears in the display.
5. To resume normal playback, repeatedly press the **Repeat** button until the “Repeat” or “RAND” icon disappears in the display.

Program Play

You can use the program play feature to play up to 20 tracks on a disc in any desired order. You may also program a particular track to play several times within a programmed sequence.

1. Load your disc as usual and wait until the display shows the total number of tracks on the disc.
2. Ensure it is in CD stop mode, press the **Program** button once, the display will

show “P 01”.

3. Press the ◀◀ or ▶▶ button to select the first track number to be programmed. When your desired track number appears in the display, press the **Program** button to confirm and the first track to play is programmed. The program memory number will advance to “P 02” and ready for the next entry.
4. If a MP3 disc is being loaded, press the **Preset +** or **Preset -** button to select folder.
5. Repeat the above steps to program other tracks, a maximum number of 20 tracks (99 for MP3) can be programmed. When you have completed programming, press the ▶|| button to begin program play, playback will be started on the first track that you have programmed and will continue until the last programmed track has played.
6. When the program play is completed, the player stops and it will remain in the program play mode as long as the “*Program Play icon*” is displayed. Press the ▶|| button will play the programmed sequence again.
7. To erase the program, press the ■ button once in CD stop mode; and press the ■ button twice during CD play, the “*Program Play icon*” will disappear in the display.

Repeat Program Play

You may use the program play and the repeat play features together to continuously repeat a programmed playback. First program the desired playback sequence, then press the **Repeat** button to select repeating the current track (Repeat One) or the entire programmed sequence (Repeat All).

Listening to your USB

1. To select USB mode, repeatedly press the **Mode** button until “USB” is displayed.
2. Insert your USB memory device into the USB port (located at the back of the unit), the display will show the total track number and you can now start your USB/MP3 playback operation.
3. To interrupt or start playback, press the ▶|| button.
4. To skip forward or back to other tracks during playback, press the ▶▶ or ◀◀ button.
5. To select other folders, press the **Preset +** or **Preset -** button.
6. To stop playback, press the ■ button.

Bluetooth mode

NOTE: Bluetooth connectivity performance may vary with brand and model of the connected device. For best performance, please connect newer Bluetooth devices incorporating Bluetooth 2.1 and using the latest firmware update available from the device vendor. Compatibility with all devices and media types is not guaranteed. The Bluetooth capabilities of this unit enable it to receive audio from many Bluetooth capable devices including mobile phones, personal computers and PDAs. It supports the following Bluetooth profiles and functionality. Only one device per profile can be connected concurrently.

Advanced Audio Distribution Profile (A2DP)

- High-quality stereo audio connection
- Streaming of stereo music from PC, mobile phones...etc

Audio Video Remote Control Profile (AVRCP)

- Device remote control
- Control connected device

Stereo music connection to your mobile phones

This connection requires a mobile phone supporting the Bluetooth A2DP profile for stereo music connection. In order to create new Bluetooth connection you will need some familiarity with the Bluetooth functions of your mobile phone. As each phone operates slightly differently, please familiarize yourself with the Bluetooth capabilities of your device before connecting.

1. Ensure that the Bluetooth on your mobile phone is powered on. You might need to refer to the phone user manual for details.
2. Place the phone and the unit where they are no more than 3 feet apart.
3. Repeatedly press the **Mode** button to select Bluetooth mode, the display will show the flashing "bt". Set the A2DP-capable phone to search for Bluetooth devices and follow the instructions on the phone's screen. You will recognize the unit by its Bluetooth name "RFW025". In case that you are prompted for a passkey, enter either "0000" or "8888".
4. Select and confirm the pairing on your phone, the connection will be completed in a few seconds and the unit will produce a beep tone, "bt" will become stable and you can now start your Bluetooth music streaming operation.
5. Press the ►|| button on the unit or select starting playback on your phone to start the music playback.

6. To interrupt playback, press the ►|| button again or select “PAUSE” on your phone.
7. To skip forward or back to other songs during playback, press the ►► or ◀◀ button on the unit or select the “skip controls” on your phone.
8. To disconnect the current paired device and open for pairing to another device, press and hold the ■ button until you see “bt” is flashing again in the display.

AUX Input

A 3.5mm stereo AUX IN socket is located at the back of the unit; analogue audio sound signals from other sources can be input to the unit through this socket.

1. Use a cable with 3.5mm jack to connect the input to other analogue audio source.
2. To select AUX IN, repeatedly press the **Mode** button until “AU” is displayed.
3. Press the **Volume +/-** button to adjust for your desired sound output level.

Headphone Jack

A 3.5mm type stereo headphone jack is located at the back of the unit. Connect a set of stereo headphones (not included) to this jack for private listening without disturbing others. The speakers are automatically disconnected when the headphones are in use.

IMPORTANT: *When using headphones always set the volume to a low level before you put the headphones on. Then insert the headphones and gradually increase the volume to a comfortable listening level.*

General Information

Care and Maintenance

Your radio is of superior design and manufacture and should be treated with care. The suggestions below will help you to enjoy this product and the benefits it brings for many years.

- Keep the product and all its parts out of reach of small children.
- Keep it dry. Avoid exposure to precipitation, humidity and liquids which could all affect the product circuitry.
- Do not leave it in high temperatures as electronic devices and plastic parts may warp in heat.
- Do not leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.
- Do not store in dusty or dirty areas.
- Do not use harsh chemicals, cleaning solvents or detergents to clean the product. Wipe with a damp (not wet) soft cloth to clean.
- Do not attempt to open the product. Unauthorised handling of the device may damage it and will void your warranty.
- Only use the power supply that came with the product. Using an unauthorised power supply will invalidate your guarantee and may irrecoverably damage the radio.

Guarantee

This product is guaranteed for 1 year from the date of original purchase against mechanical and electrical defects. You will get extra 2 years warranty period by registered your product within 30 days after purchase.

Please fill in required information on the warranty card and email back to cs@smith-style.com within 30 days of purchase.

Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be solely for domestic purpose.

- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.

- Specifications are subject to change without notice.

The manufacturer disclaims any liability for the incidental or consequential damages.

- The guarantee is in addition to and does not diminish your statutory or legal rights.

Guarantor:

Smith-Style Consumer Products Company Ltd.

Unit 5, KBF House,

55 Vitoria Road, RH15 9LH

Burgess Hill, UK



This symbol indicates that this product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk



Batteries contain substances that may be harmful to the environment and human health. Keep out of the reach of children and seek immediate

medical help if swallowed.

This symbol indicates that batteries should not be disposed of in the normal household waste but taken to appropriate local recycling facilities, where and when these are available.

Never throw batteries in a fire or attempt to open the outer casing.