

# SMITH<sup>Style</sup>

## Smith-Style Metal DAB Radio Instruction Manual



# CONTENTS

General Safety	4
Product Overview	7
<b>Basic Operation</b>	
Inserting Batteries	8
Switch on by main	9
Switch on by battery	9
Mode Change	10
Volume Control	10
Change DAB Station	10
Change FM Station	11
Auto Scan	11
Menu	12
Info	13
Storing Stations	14
Recall Preset Stations	15
Slideshow	15
Egg Timer	16
Timer	17
Alarm	18
Time/Date	19
Backlight	20
Language	21
Factory Reset	22
Troubleshooting	23
Specifications	24



## Important Safety Instructions

**WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS SPEAKER TO RAIN OR MOISTURE.**

To reduce the risk of electrical shock, fire, etc.:

1. Do not place unit near any heat source such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
2. Do not block any ventilation openings of unit.
3. The unit shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the unit.
4. Do not place any heavy loads onto the unit, and do not step on it, the load may fall and cause serious injury to the unit.
5. Please read Rating Labels at the back of unit for power input and other safety information.
6. This unit is intended to be used only with the power supply provided.
7. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at any point where they exit from the unit.
8. Never unplug your unit by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet.
9. Repair or replace all electric service cords that have become frayed or otherwise damaged immediately. Do not use a cord that shows cracks or abrasion damage along its length, the plug or the connector end.
10. To prevent fire or shock hazard, do not use this plug with an extension cord or other outlet unless the blades can be fully inserted to prevent blade exposure.
11. During lightning or raining days, unplug the unit for additional protection during thunderstorms or when the unit is not used for prolonged periods. This will prevent damage to the unit from lightning and power surges.
12. Do not attempt to carry out any service work yourself. By opening or removing the cabinet, you may be exposed to dangerous voltage or other hazards. Any service work should be carried out by qualified technicians.
13. The normal function of the product may be disturbed by strong Electro-Magnetic Interference. If so, simply reset the product to resume normal operation by following the instruction manual. In case the function could not resume, please use the product in other location.
14. The means of disconnecting this apparatus from the mains supply is plug of adapter. The disconnect device shall remain readily operable.
15. The battery of remote control shall not be exposed to excessive heat such as sunshine, fire or the like.
16. Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
17. In the interests of safety and to avoid unnecessary energy consumption, never leave the unit switched on while unattended for long periods of time, e.g. overnight, while on holiday or while out of the house. Switch it off and disconnect the mains plug from the mains socket.

# PRODUCT OVERVIEW

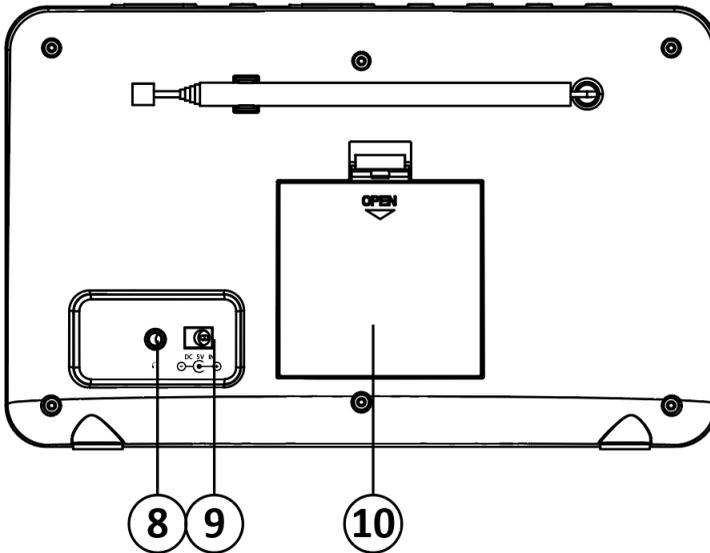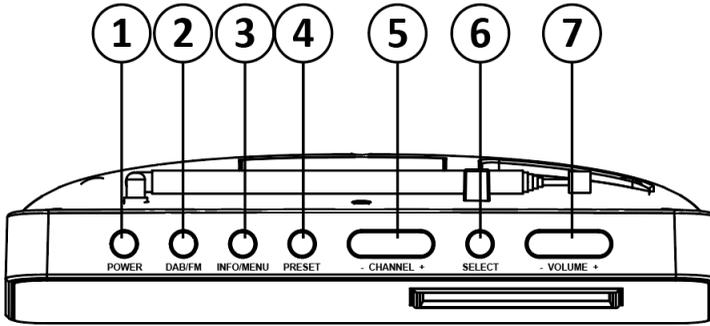


- |   |             |    |                     |
|---|-------------|----|---------------------|
| 1 | On/Off      | 6  | Select              |
| 2 | DAB/FM      | 7  | Volume -/+          |
| 3 | Info/Menu   | 8  | Earphone Jack       |
| 4 | Preset      | 9  | DC in               |
| 5 | Channel -/+ | 10 | Battery Compartment |

# BASIC OPERATION

## Inserting the batteries (optional)


1. Before installing the batteries (not included) please ensure that the radio is switched o (slide the power switch on the back to Off) and is unplugged from the mains power supply.
2. On the back of the radio, push in the tab to release and remove the battery compartment cover (Fig 2.) .
3. Insert 4 x 1.5V AA-size (also known as LR6) batteries, making sure to note the '+' and '-' markings and position the batteries the correct way around. .
4. Replace the battery cover, making sure it 'clicks' shut.

Fig 2.

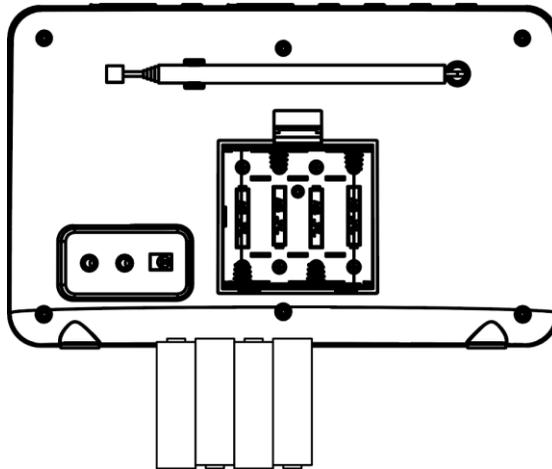


Note: For battery operation, please ensure that the mains power is switched off and remove the mains power plug from the socket, on the back of the Radio.


## Switch on by Main

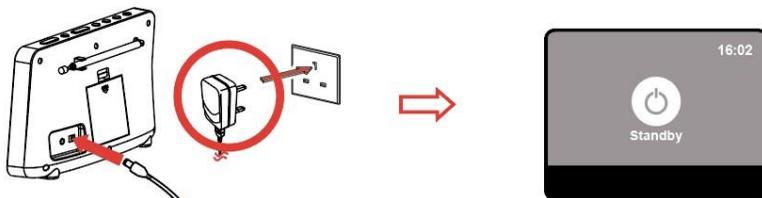


**Note:** Standby mode only available when radio powered by adapter.

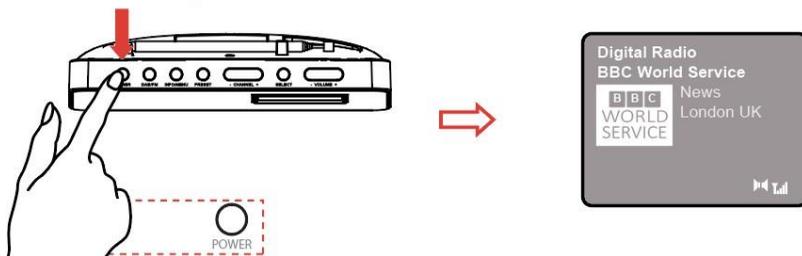


## Switch on by battery

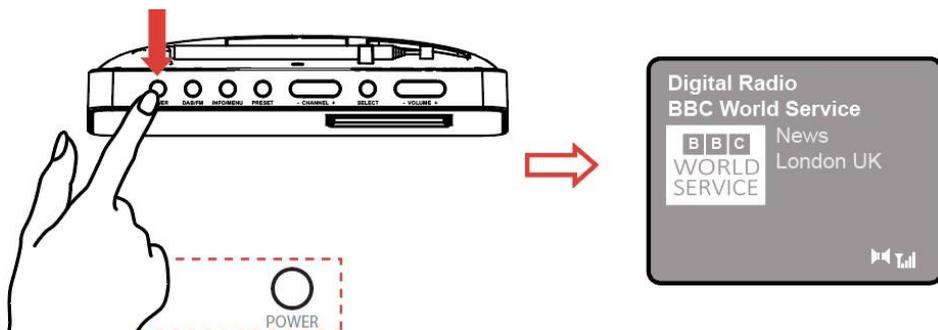

## Mode Change

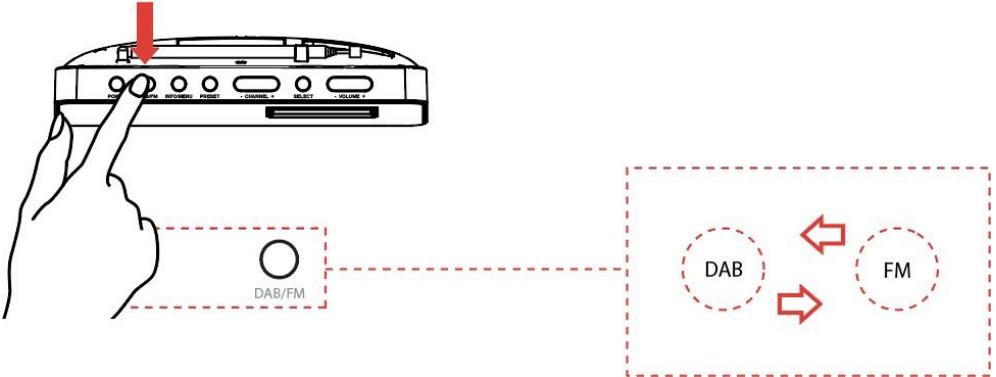

## Volume Control

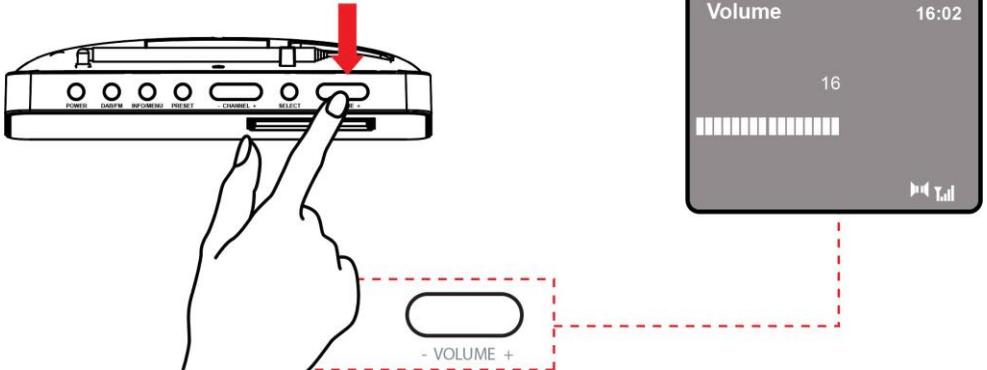


## Change DAB Station



Select the station you wish to listen to


## Change FM Station

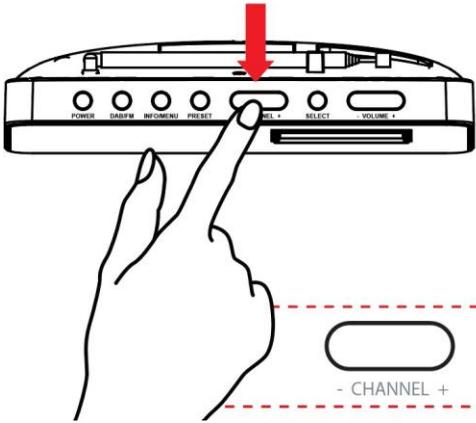


+/- 0.05 MHz



## Auto Scan

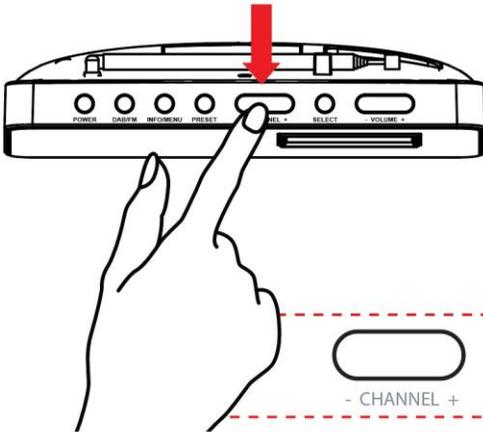


Auto scan to next station

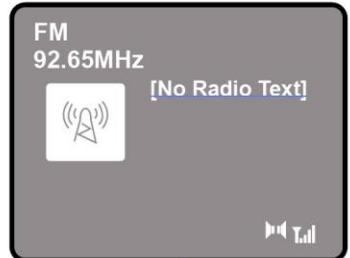



Hold for 2 sec

# Menu



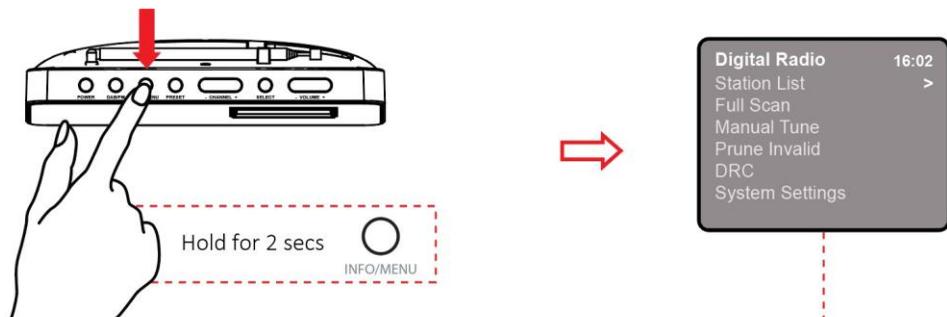


**Digital Radio** 16:02 >


- Station List
- Full Scan
- Manual Tune
- Prune Invalid
- DRC
- System Settings

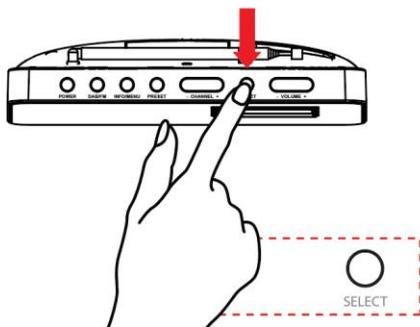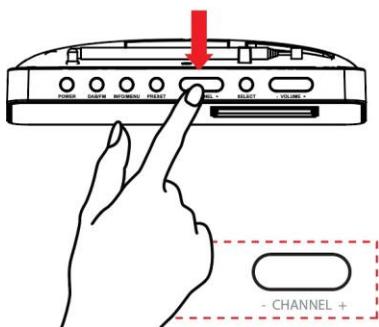


# Info

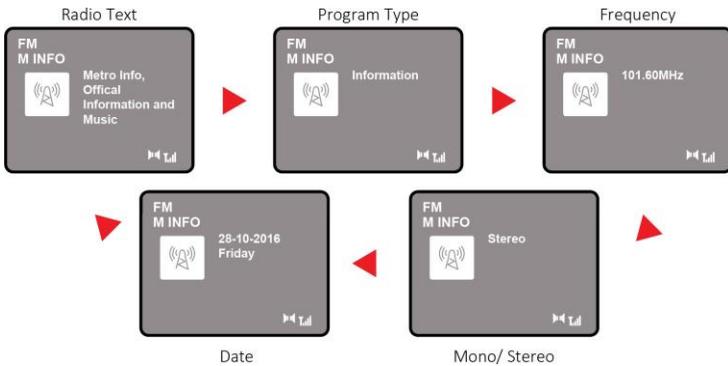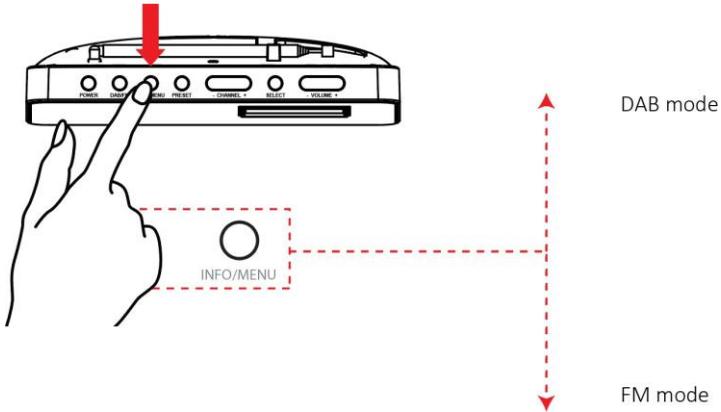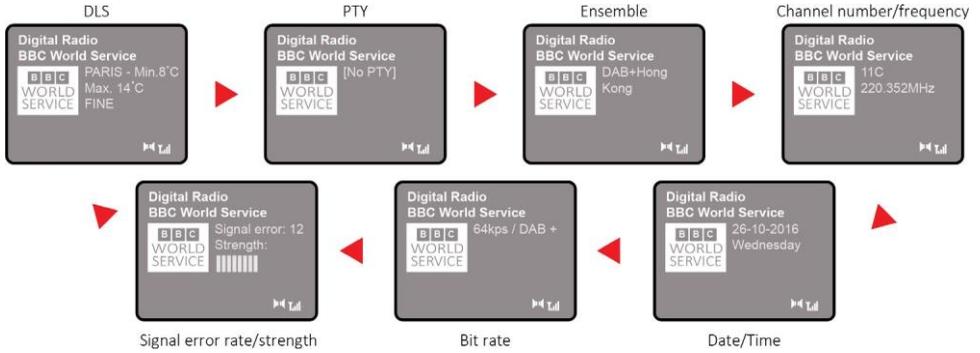


## Storing Stations

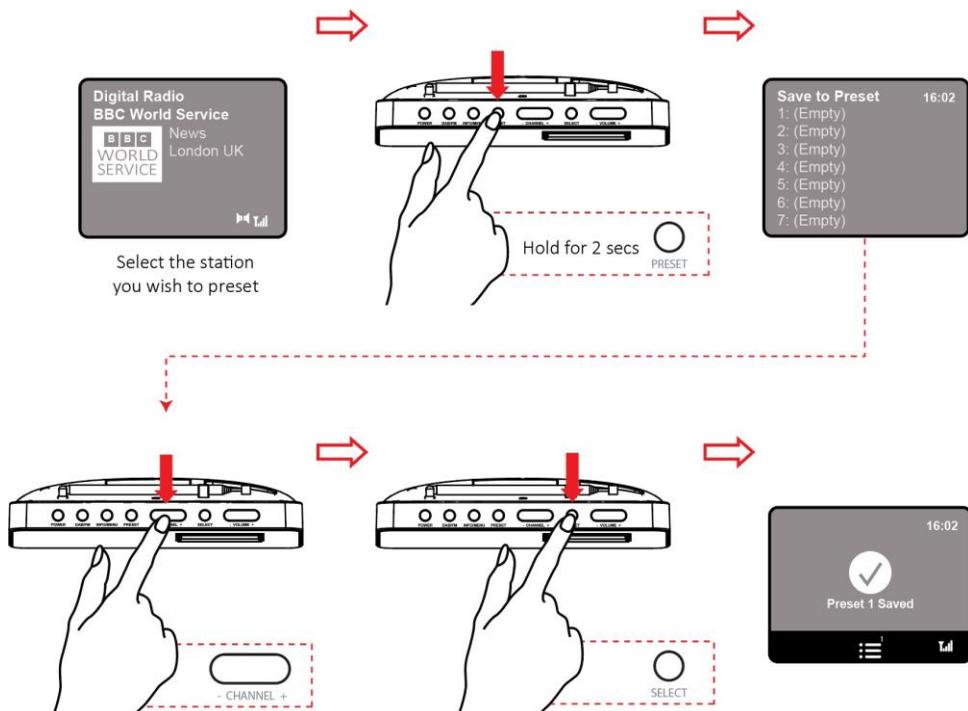






# Recall Preset Stations

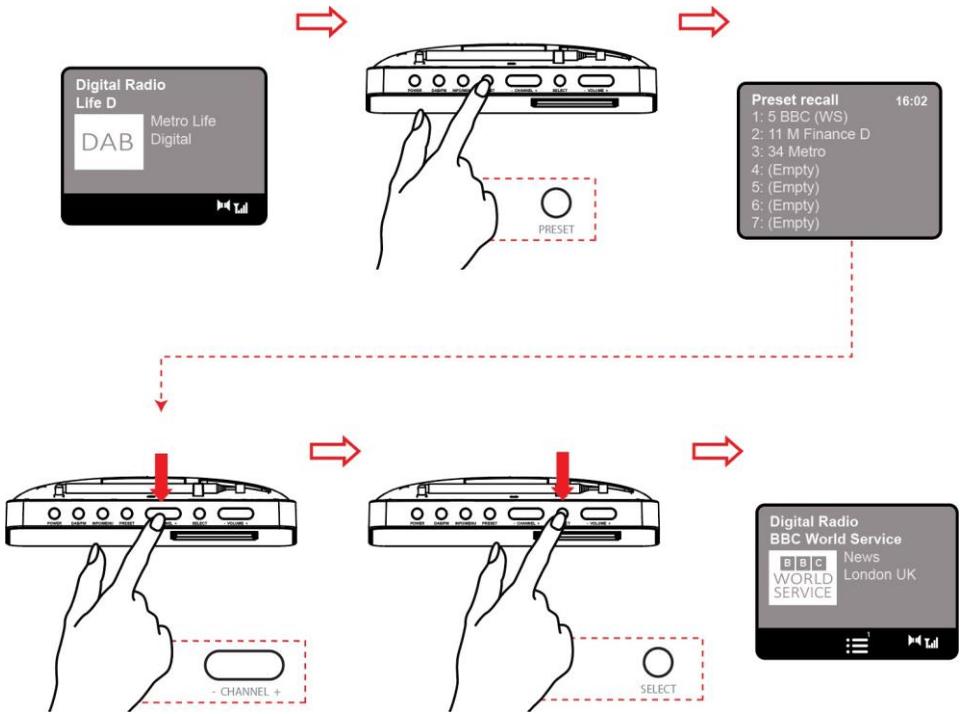

# Slideshow





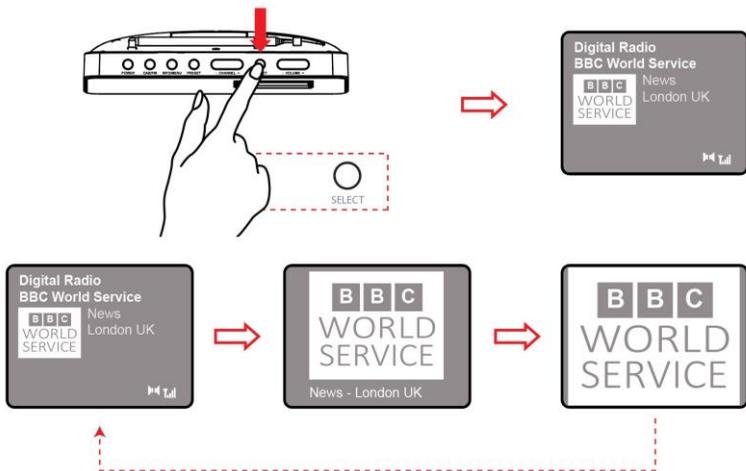


# Egg Timer

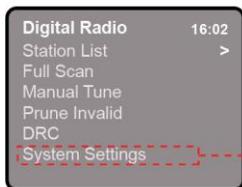
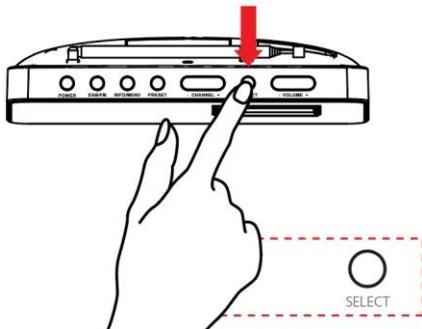
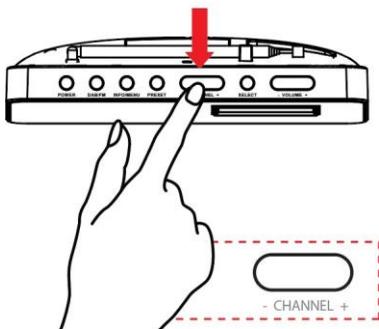
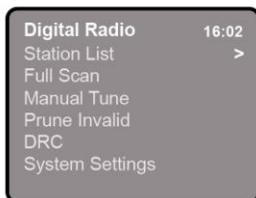
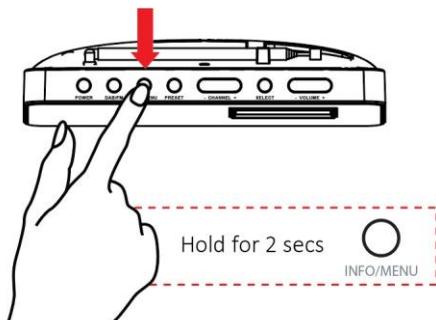


Select from 1 to 99 minutes;  
press POWER to stop the buzzer.






# Timer

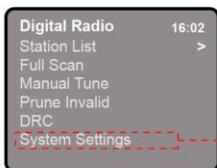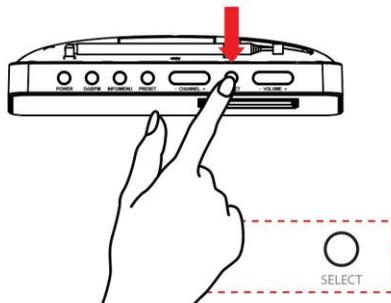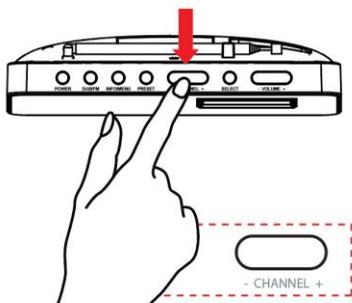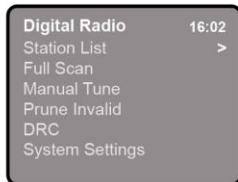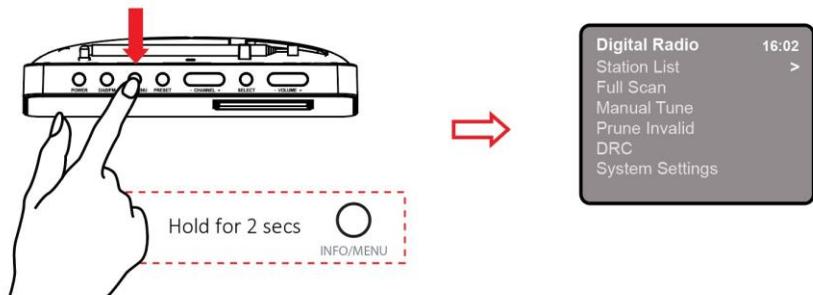


# Alarm

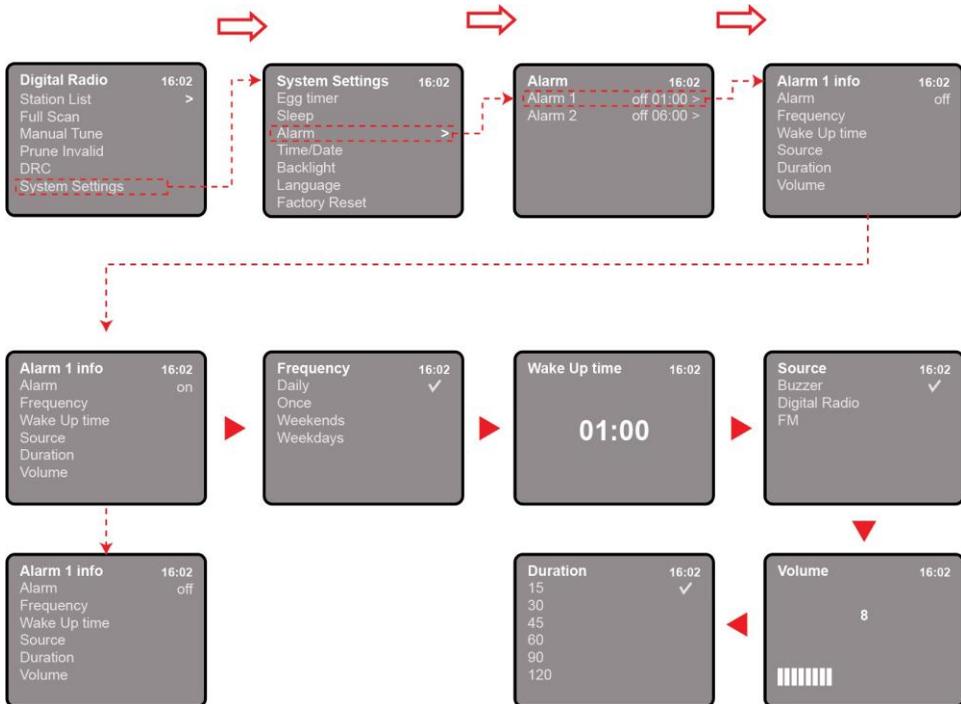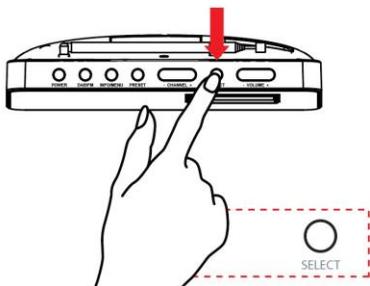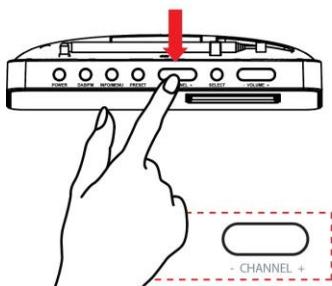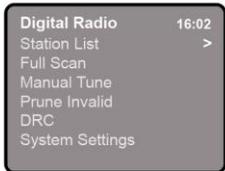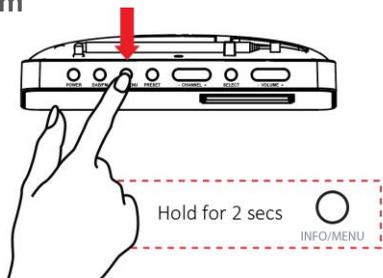

# Time/Date

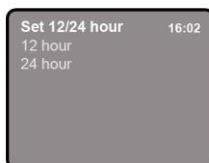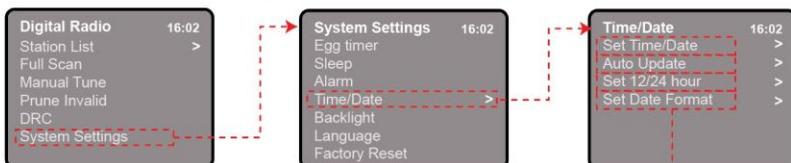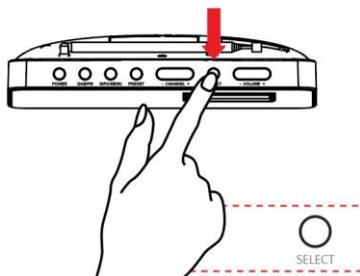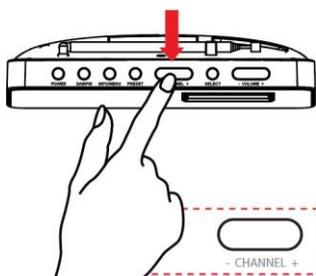
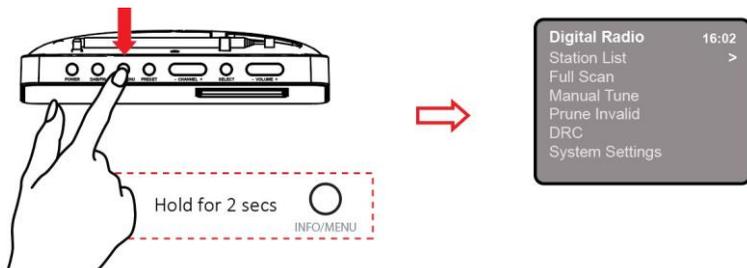


# Backlight

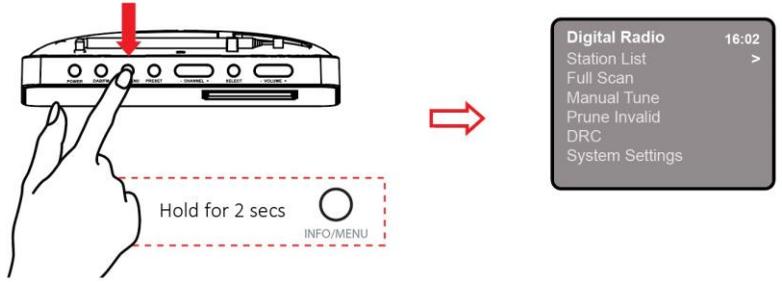

**Digital Radio** 16:02

- Station List
- Full Scan
- Manual Tune
- Prune Invalid
- DRC
- System Settings

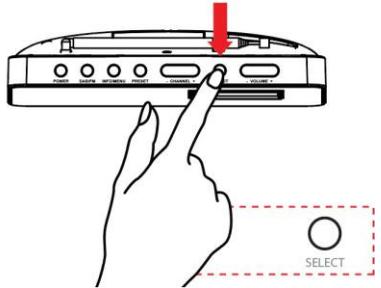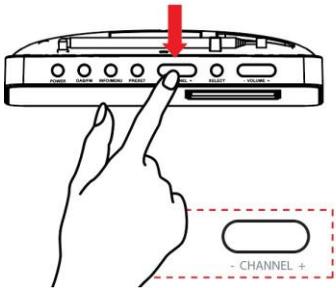

**Digital Radio** 16:02

- Station List
- Full Scan
- Manual Tune
- Prune Invalid
- DRC
- System Settings

**System Settings** 16:02

- Egg timer
- Sleep
- Alarm
- Time/Date
- Backlight
- Language
- Factory Reset

**Backlight** 16:02

- Timeout
- On Level
- Dim Level

**Timeout** 16:02

- On
- 10 sec
- 20 sec
- 30 sec
- 45 sec
- 60 sec
- 90 sec






**On Level** 16:02

- Hi
- Medium
- Low






**Dim Level** 16:02

- Hi
- Medium
- Low

# Language

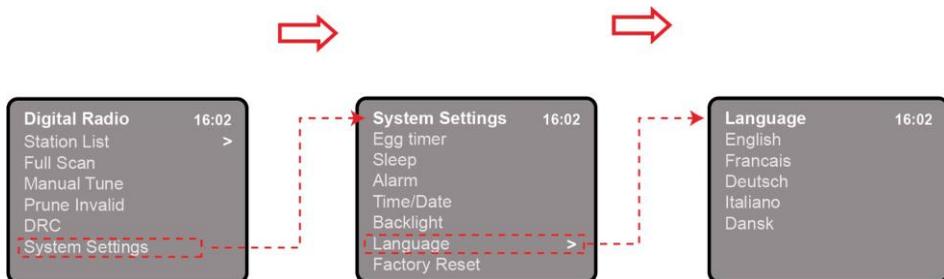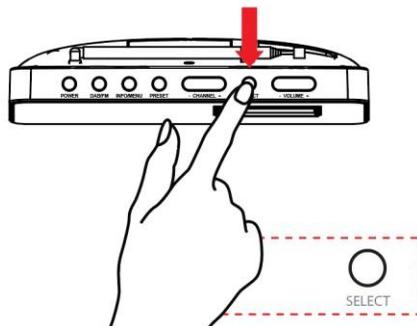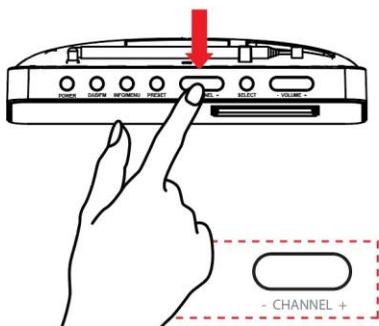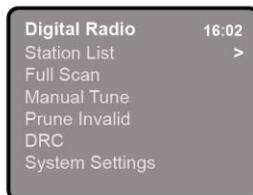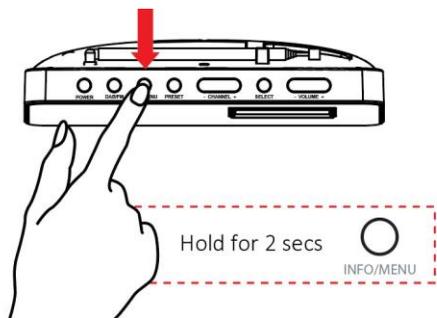

# Factory Reset

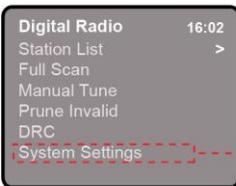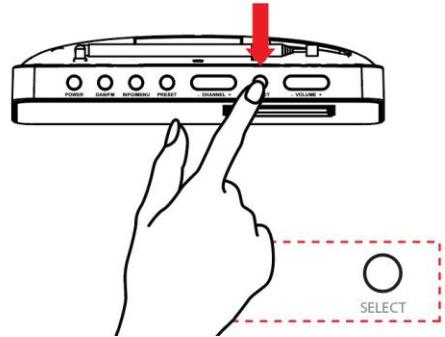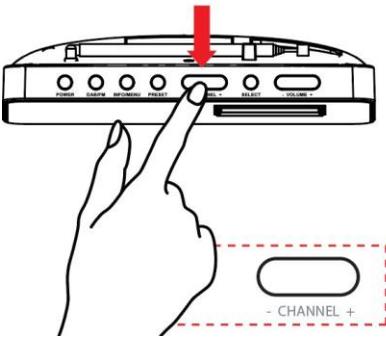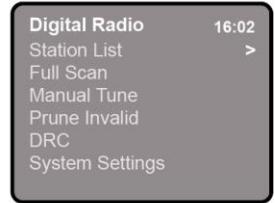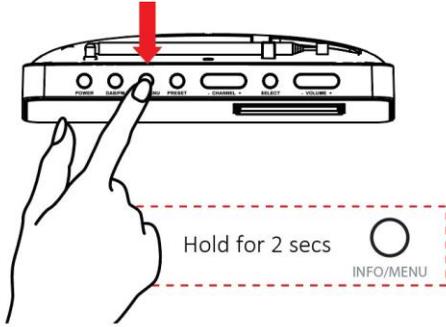

Note: Factory reset will erase all station lists, settings previously stored

# TROUBLESHOOTING

- Problem:** FM Hiss/DAB Burbling/intermittent cut-out/DAB  
No stations available message.
- Cause:** Low signal strength
- Solution:** Check/move antenna. Move radio. Rescan local (high-strength) stations only. (For DAB, check local coverage at <http://www.digitalradioplus.com.au/can-i-get-digital-radio> then rescan stations).

## Error Messages

- Services not available** No DAB reception
- Signal error** The DAB signal has been interrupted
- No DAB Station** The listed station cannot be found. (No Name):  
The current station does not broadcast an identity name.
- No Stations Found** No DAB stations are available, check aerial.
- No Radio Text** No RDS text information is available on this station.
- No PTY** No RDS Program type information is available.
- No Name** No RDS station name is being broadcast.

## SPECIFICATIONS

<b>Power Supply</b>	DC 5V 1A; DC 6V (4 x AA batteries)
<b>Audio Output</b>	1 x 1W RMS
<b>Power</b>	5W (maximum)
<b>Batteries</b>	4 x 1.5V AA batteries (optional, not supplied)
<b>LCD Display</b>	2.8" Colour TFT Display
<b>Frequency</b>	
<b>DAB</b>	174.928 MHz to 239.299 MHz
<b>FM</b>	87.5 MHz to 108 MHz
<b>Dimensions</b>	216 (w) x 51 (d) x 133 (h) mm

## General Information

### Care and Maintenance

Your radio is of superior design and manufacture and should be treated with care. The suggestions below will help you to enjoy this product and the benefits it brings for many years.

- Keep the product and all its parts out of reach of small children.
- Keep it dry. Avoid exposure to precipitation, humidity and liquids which could all affect the product circuitry.
- Do not leave it in high temperatures as electronic devices and plastic parts may warp in heat.
- Do not leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.
- Do not store in dusty or dirty areas.
- Do not use harsh chemicals, cleaning solvents or detergents to clean the product. Wipe with a damp (not wet) soft cloth to clean.
- Do not attempt to open the product. Unauthorised handling of the device may damage it and will void your warranty.
- Only use the power supply that came with the product. Using an unauthorised power supply will invalidate your guarantee and may irrecoverably damage the radio.

## Guarantee

This product is guaranteed for 1 year from the date of original purchase against mechanical and electrical defects. You will get extra 2 years warranty period by registered your product within 30 days after purchase.

Please fill in required information on the warranty card and email back to [cs@smith-style.com](mailto:cs@smith-style.com) within 30 days of purchase.

Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.

The manufacturer disclaims any liability for the incidental or consequential damages.

- The guarantee is in addition to and does not diminish your statutory or legal rights.

Guarantor:

Smith-Style Consumer Products Company Ltd.

Unit 5, KBF House,

55 Vitoria Road, RH15 9LH

Burgess Hill, UK



This symbol indicates that this product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk)



Batteries contain substances that may be harmful to the environment and human health. Keep out of the reach of children and seek immediate medical help if

swallowed.

This symbol indicates that batteries should not be disposed of in the normal household waste but taken to appropriate local recycling facilities, where and when these are available.

Never throw batteries in a fire or attempt to open the outer casing.