


# SMITH<sup>Style</sup>

## Smith-Style Coppice DAB Radio Instruction Manual

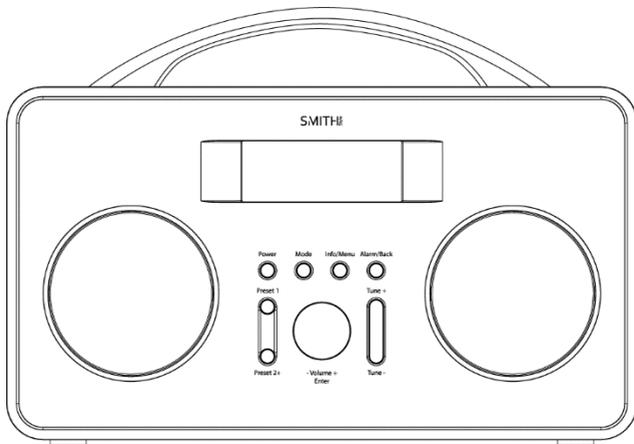

# Important Safety Instructions

**WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS SPEAKER TO RAIN OR MOISTURE.**

To reduce the risk of electrical shock, fire, etc.:

1. Do not place unit near any heat source such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
2. Do not block any ventilation openings of unit.
3. The unit shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the unit.
4. Do not place any heavy loads onto the unit, and do not step on it, the load may fall and cause serious injury to the unit.
5. Please read Rating Labels at the back of unit for power input and other safety information.
6. This unit is intended to be used only with the power supply provided.
7. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at any point where they exit from the unit.
8. Never unplug your unit by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet.
9. Repair or replace all electric service cords that have become frayed or otherwise damaged immediately. Do not use a cord that shows cracks or abrasion damage along its length, the plug or the connector end.
10. To prevent fire or shock hazard, do not use this plug with an extension cord or other outlet unless the blades can be fully inserted to prevent blade exposure.
11. During lightning or raining days, unplug the unit for additional protection during thunderstorms or when the unit is not used for prolonged periods. This will prevent damage to the unit from lightning and power surges.
12. Do not attempt to carry out any service work yourself. By opening or removing the cabinet, you may be exposed to dangerous voltage or other hazards. Any service work should be carried out by qualified technicians.
13. The normal function of the product may be disturbed by strong Electro-Magnetic Interference. If so, simply reset the product to resume normal operation by following the instruction manual. In case the function could not resume, please use the product in other location.
14. The means of disconnecting this apparatus from the mains supply is plug of adapter. The disconnect device shall remain readily operable.
15. The battery of remote control shall not be exposed to excessive heat such as sunshine, fire or the like.
16. Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
17. In the interests of safety and to avoid unnecessary energy consumption, never leave the unit switched on while unattended for long periods of time, e.g. overnight, while on holiday or while out of the house. Switch it off and disconnect the mains plug from the mains socket.

# Contents

<b>Instruction Manual</b> .....	1
Important Safety Instructions .....	2
Getting Started .....	4
Unit Views .....	5
DAB Mode .....	5
Manual tune .....	5
DRC (Dynamic Range Control) value.....	6
Prune.....	6
Viewing Station Information .....	6
<b>FM Mode</b> .....	6
Selecting FM Mode .....	6
Scan setting .....	6
Audio Settings.....	7
<b>General Operation</b> .....	7
Setting Time/Date.....	7
Setting Backlight.....	7
Setting Language .....	8
Factory Reset.....	8
Software version.....	8
<b>Specification</b> .....	9
<b>General Information</b> .....	10
<b>Care and Maintenance</b> .....	10
<b>Guarantee</b> .....	10

## Getting Started

Carefully remove your radio from the box. You may wish to store the packaging for future use.

### What can you find inside of your package

- Main unit
- Instruction manual
- Power adapter

### Positioning your Radio

Place your radio on a flat / stable surface that is not subject to vibrations.

### Avoid the following locations:

- Where the radio will be exposed to direct sunlight.
- Where the radio will be close to heat radiating sources.
- Where the humidity is high and ventilation is poor.
- Where it is dusty.
- Where it is damp or there is a possibility of water dripping or splashing onto unit.


### Adjusting the Antenna

Unwind the DAB/FM antenna and screw it to Antenna socket on the back of the unit to ensure you receive the best reception possible in both DAB and FM radio modes. It may be necessary to adjust the position of the radio and /or antenna to achieve the best signal.

### Turning the Unit On/Off

Connect the plug at the end of power adapter cable to the DC IN socket on the back of the unit. Then insert the power adapter into the mains socket. Press button on the unit to turn unit on or standby. To switch the unit off completely, unplug the power adapter from the mains socket.

# Unit Views

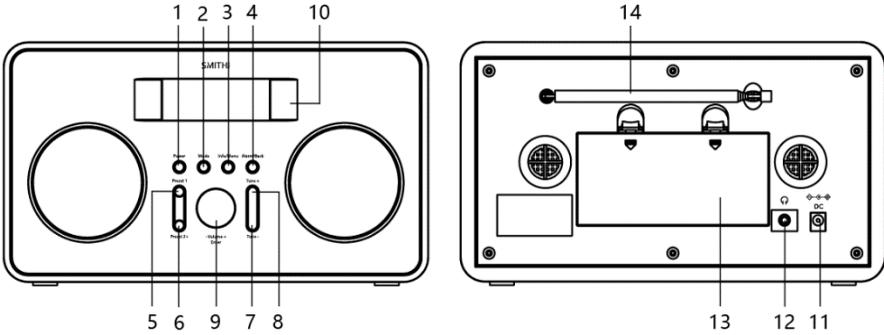

- |              |                 |                         |
|--------------|-----------------|-------------------------|
| 1. On/Off    | 6. Preset 2     | 11. DC socket           |
| 2. Mode      | 7. Tune -       | 12. Headphone socket    |
| 3. Info/Menu | 8. Tune +       | 13. Battery Compartment |
| 4. Back      | 9. Volume/Enter | 14. Antenna             |
| 5. Preset 1  | 10. Display     |                         |

# DAB Mode

## Selecting DAB mode

1. Press **Mode** button repeatedly to select **DAB** mode.
2. For initial use, radio will perform a full scan and store stations list in memory.
3. Once the scanning is completed, the DAB/DAB+ stations will be displayed in alphanumeric order. The first station in the list will be automatically selected to play.
4. **Note:** if no DAB/DAB+ signal is found in your area, it may be necessary to relocate your radio to a stronger signal area.

## Selecting another Station

While a program is playing, press **Tune –** or **Tune +** button to select the stations you want to play, then press **Enter** button to confirm.

## Scanning Stations

Press and hold **Info/menu** button, press **Tune –** or **Tune +** button to select 'Full scan', and then press **Enter** button to scan all available stations

## Manual tune

You could select the frequency manually.

1. Press and hold **Info/menu** button, press **Tune –** or **Tune +** button to

- select 'Manual tune', and then press **Enter** button to confirm.
2. Press **Tune –** or **Tune +** button to select the frequency you desire, and then press **Enter** button to confirm.

## DRC (Dynamic Range Control) value

You can set the compression level of stations to eliminate the differences in dynamic range or sound level between radio stations.

1. Press **Info/menu** button, press **Tune –** or **Tune +** button to select 'DRC', and then press **Enter** button to confirm.
2. Press **Tune –** or **Tune +** button to select through 'DRC high', 'DRC low' or 'DRC off', press OK button to confirm.

## Prune

You may remove all unavailable stations from the station list.

1. Press and hold **Info/menu** button, press **Tune –** or **Tune +** button to select 'Prune', and then press **Enter** button to confirm.
2. Press **Tune –** or **Tune +** button to select 'YES', and then press **Enter** button to confirm.

## Viewing Station Information

DAB/DAB+ stations broadcast additional information. Press **Info/menu** button on the main unit repeatedly to view information through DLS (Dynamic Label Segment), Ensemble, Program Frequency, Signal Quality, Signal Strength, Bitrate, Codec, Channel and Date.

## FM Mode

### Selecting FM Mode

1. Press **DAB/FM** button repeatedly to select FM mode.
2. For initial use, it will start at the beginning of the FM frequency range (87.50MHz). Otherwise, the last listened FM station will be selected.
3. To manually change the FM frequency, while FM frequency shows up, press **Tune –** or **Tune +** button to change the frequency by 0.05MHz.
4. To automatically scan, while FM frequency shows up, press and hold **Tune –** or **Tune +** button for 3 seconds, your radio will skip backwards or forwards until it reached the next available station.

### Scan setting

By default, FM scans stop at any available station. This may result in a poor signal-to-noise ratio (hiss) from weak stations.

1. To change the scan settings to stop only at stations with good signal strength,

press **Info/menu** button for 3 seconds, press **Tune –** or **Tune +** button to select 'Scan setting', and then press **Enter** button to confirm.

2. Display will show 'Strong stations only', press **Tune –** or **Tune +** button to select between 'Strong stations only' and 'All stations' then press **Enter** button to confirm.

## Audio Settings

By default, all stereo stations are reproduced in stereo. For weak stations, this may result in a poor signal-to-noise ratio (hiss).

1. To play weak stations in mono, press **Info/menu** button for 3 seconds, press **Tune –** or **Tune +** button to select 'Audio setting', and then press **Enter** button to confirm.
2. Press **Tune –** or **Tune +** button to select 'Forced mono', and then press **Enter** button to confirm.

## General Operation

### Setting Time/Date

1. Press **Info/menu** button for 3 seconds at either DAB or FM mode, then press **Tune –** or **Tune +** button to select System > Time, press **Enter** button to confirm.
2. Press **Tune –** or **Tune +** button to select options, and then press **Enter** button to confirm the setting.

Set Time/Date	Manually set-up both Time and Date
Auto update	'Update from any', Update from DAB', 'Update from FM', or 'No update'
Set 12/24 hour	12 or 24 hour format
Set date format	DD-MM-YYYY or MM-DD-YYYY

3. Then setting time according to your personal preference.

### Setting Backlight

1. Press **Info/menu** button > System > Backlight, press **Enter** button to confirm.
2. Press **Tune –** or **Tune +** button to select 'On Level' or 'Dim Level', then press **Enter** button to confirm.
3. Press **Tune –** or **Tune +** button to select backlight level, and then press **Enter** button to confirm the setting.

Timeout	On/10*/20/30/45/60/90/120/180 sec
On-level	High*/Medium/Low
Dim-level	High*/Medium/Low

\* means default

## Setting Language

This feature enables you to change menu language. The default menu language is English.

1. Press **Info/menu** button for 3 seconds > System > Language, press **Enter** button to confirm.
2. Press **Tune –** or **Tune +** button to select your language, and then press **Enter** button to confirm.

## Factory Reset

A factory reset resets all user settings to default values, so time/date and presets are lost.

1. Press **Info/menu** button for 3 seconds > System > Factory Reset, press **Enter** button to confirm.
2. Press **Tune –** or **Tune +** button to select 'YES', and then press OK button to confirm.

**Note:** A factory reset clears all user defined settings, replacing them with the original default values, so time/date, preferences/settings, DAB station list and preset stations are all lost.

## Software version

This is used to display the current software version. To view the software version, press **Info/menu** button for 3 seconds > System > SW version, press **Enter** button to confirm.

# Specification

<b>ITEMS</b>	<b>DESCRIPTION</b>
<b>Specifications:</b>	DAB+/FM Radio
<b>Power Supply:</b>	AC Input: 100-240V ~, 50-60Hz, 0.3A MAX DC Output: 6V, 1A Batteries: 4 x 1.5V C size batteries(not included)
<b>Frequency Ranges:</b>	FM: 87.5-108MHz DAB/DAB+: Band III, 174.928-239.200MHz
<b>Output Power:</b>	2 x 1Wrms
<b>Dimension (L x H x D):</b>	261mm x 146mm x 92mm
<b>Working Temperature:</b>	0 – 45°C

# General Information

## Care and Maintenance

Your radio is of superior design and manufacture and should be treated with care. The suggestions below will help you to enjoy this product and the benefits it brings for many years.

- Keep the product and all its parts out of reach of small children.
- Keep it dry. Avoid exposure to precipitation, humidity and liquids which could all affect the product circuitry.
- Do not leave it in high temperatures as electronic devices and plastic parts may warp in heat.
- Do not leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.
- Do not store in dusty or dirty areas.
- Do not use harsh chemicals, cleaning solvents or detergents to clean the product. Wipe with a damp (not wet) soft cloth to clean.
- Do not attempt to open the product. Unauthorised handling of the device may damage it and will void your warranty.
- Only use the power supply that came with the product. Using an unauthorised power supply will invalidate your guarantee and may irrecoverably damage the radio.

## Guarantee

This product is guaranteed for 1 year from the date of original purchase against mechanical and electrical defects. You will get extra 2 years warranty period by registered your product within 30 days after purchase.

Please fill in required information on the warranty card and email back to [cs@smith-style.com](mailto:cs@smith-style.com) within 30 days of purchase.

Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be solely for domestic purpose.

- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.

- Specifications are subject to change without notice.

The manufacturer disclaims any liability for the incidental or consequential damages.

- The guarantee is in addition to and does not diminish your statutory or legal rights.

Guarantor:

Smith-Style Consumer Products Company Ltd.

Unit 5, KBF House,

55 Vitoria Road, RH15 9LH

Burgess Hill, UK



This symbol indicates that this product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk)



Batteries contain substances that may be harmful to the environment and human health. Keep out of the reach of children and seek immediate medical help if swallowed.

This symbol indicates that batteries should not be disposed of in the normal household waste but taken to appropriate local recycling facilities, where and when these are available.

Never throw batteries in a fire or attempt to open the outer casing.